


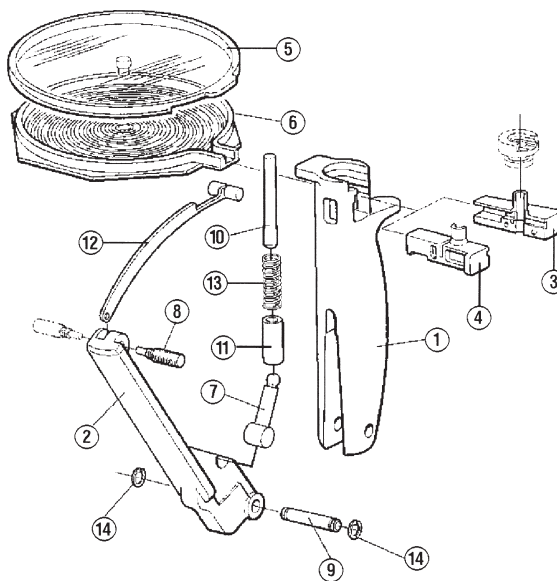

90200 HAND PRIMING TOOL


Key	Part #	Description
1	7-90201	Hand Priming Tool Body
2	7-90202	Handle
3	1-90203	Primer Feed, Large Right Half
3	1-90205	Primer Feed, Small Right Half
4	1-90204	Primer Feed, Large Left Half
4	1-90206	Primer Feed, Small Left Half
5	1-90207	Primer Tray Lid
6	1-90208	Primer Tray
7	7-90220	Pivot Link Assembly
8	7-90211	Safety Gate Screw
9	7-90212	Handle Pin
10	7-90213	Primer Rod, Small
10	7-90214	Primer Rod, Large
11	7-90215	Link Follower
12	1-90221	Safety Gate Assembly
13	1-90217	Return Spring
14	187549	Retaining Ring (2) External



09550 UNIVERSAL PRIMER ARM-2

Key	Part #	Description
1	◆	Body
2	09552	Plug & Sleeve & Spring, Lg.
2	09553	Plug & Sleeve & Spring, Sm.


◆ Not Available Separately

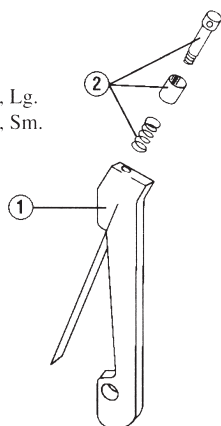

09450 POSI-PRIME HAND PRIMING TOOL

Key	Part #	Description
1	◆	Hand Priming Tool Body Assembly
2	09111	Shell Holder Ram Clip Spring
3	09549	Primer Rod Assembly (Lg. & Sm.)

◆ Not Available Separately

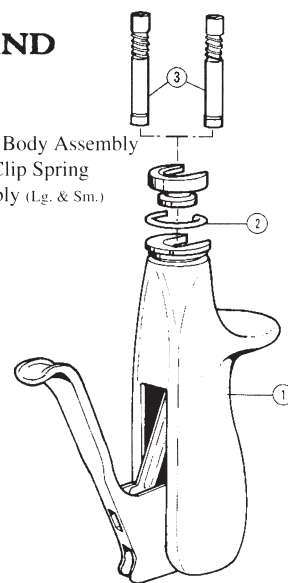

NOTE: This product has been discontinued and is no longer available. See replacement parts are available. Call or write RCBS Customer Service for information

09460 AUTOMATIC PRIMING TOOL

Key	Part #	Description
1	09462	Main Body Casting
2	09472	Automatic Primer Feed Arm
3	09595	Stop Pin
4	09596	Coil Spring
5	09591	Setscrew, 1/4-28 x 3/16 CP
6	09464	Shoulder Bolt 7/16
7	09473	Handle
9	09264	Handle Grip
10	09467	Setscrew, 5/16-18 x 3/8 HD
11	09468	Main Ram
12	09471	Primer Rod Assembly (Lg. & Sm.)
13	09111	Spring Clip
14	09581	Primer Tube Assembly, Large
14	09582	Primer Tube Assembly, Small
15	09599	Primer Tube Cotter Pin
16	09465	Return Spring

